


1. Installation on tiles

**A** Installation not using profiles


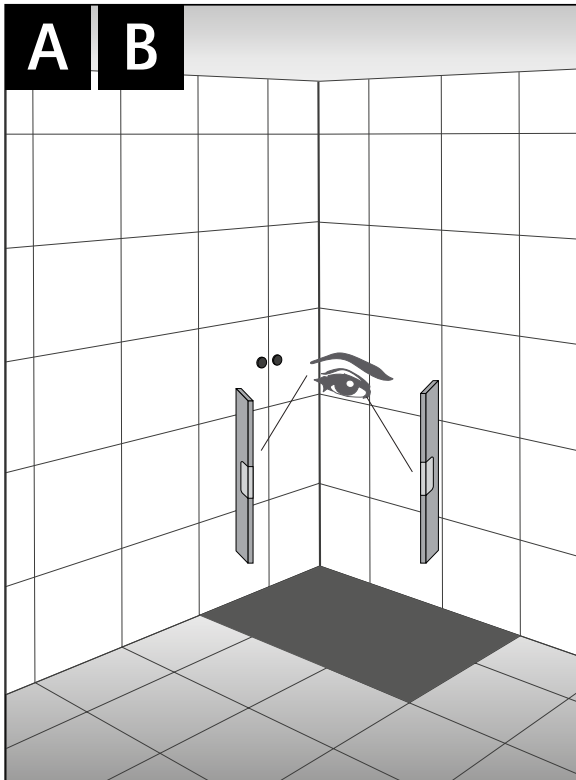


Before installing the MULTISTAR® VISION PLUS panel, verify that the walls are level.


**B** Installation using profiles



Clean the existing tiles using a soft cloth and our basic cleaner for existing tiled surfaces (Art. SH 30066).

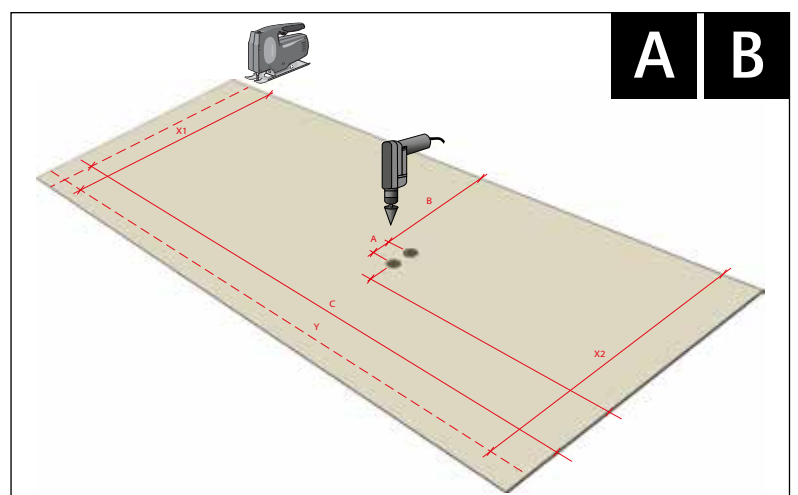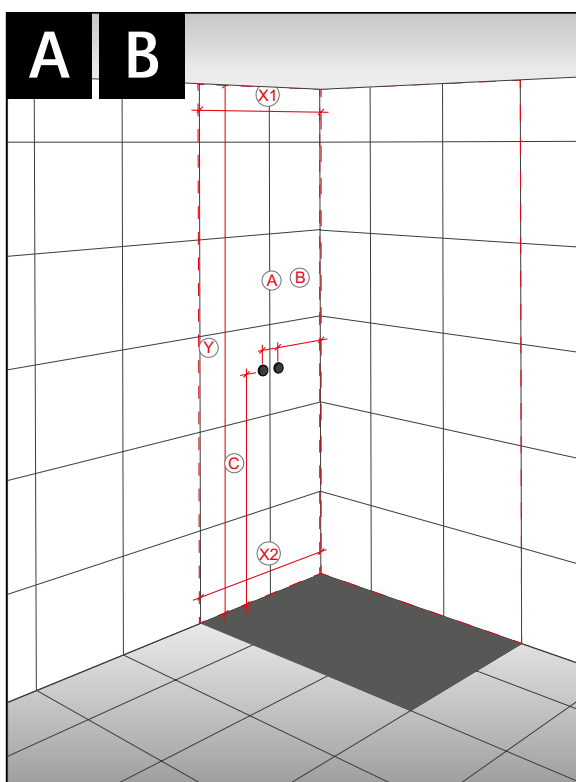


Draw the outline of the panels on the wall. Transfer the dimension onto the panel and cut the panel to size. When taking your measurements, take into account the expansion joint between the panels. Drill the holes for the connections. You can use all standard wood processing tools to work on the panels. Vacuum or sweep any shavings off the panels. Always work on the face side of the panel. Make sure that the panel is well supported. Caution - risk of breakage!

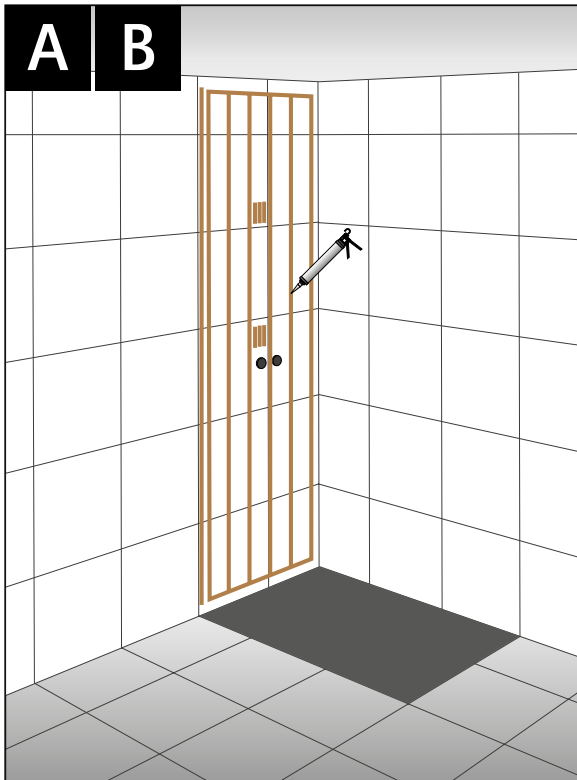


Apply the beads of adhesive for the panels to the wall vertically, at a spacing of approx. 50 mm.

Place the beads of adhesive at a spacing of 10 mm in those places where you intend to attach accessories (shower head sliding rail, soap dish, shower stall door, etc.).


Ideal bead thickness 4-6 mm.

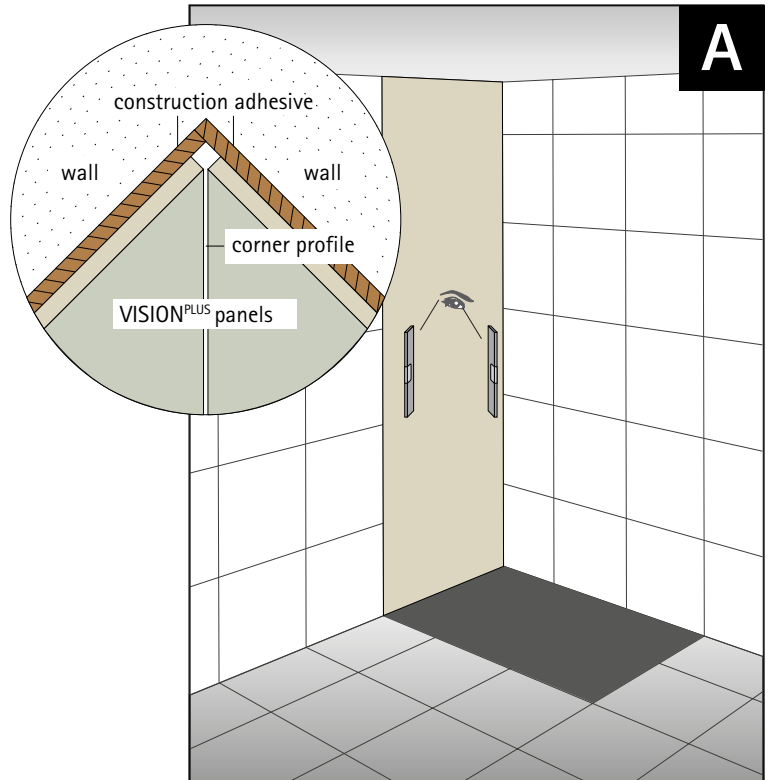


Position the MULTISTAR® VISION PLUS panel on the wall and press it on evenly.

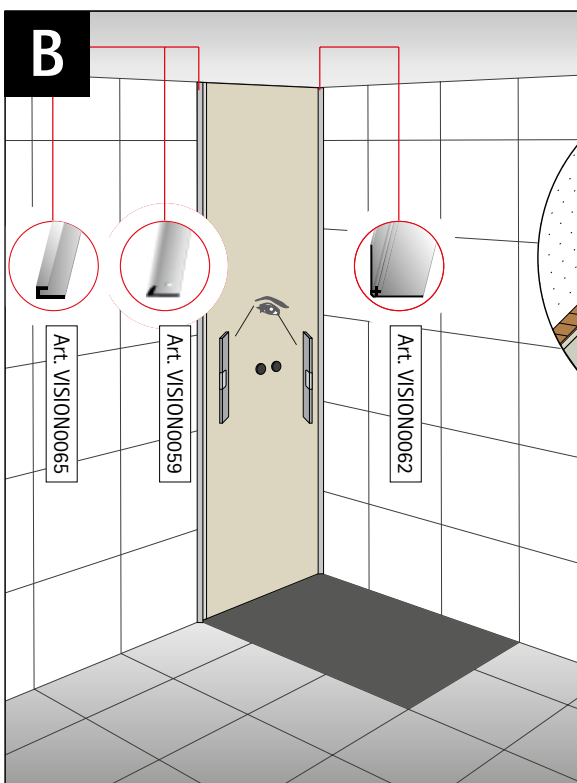


Apply transparent silicone (Art. SH 30051) onto the profile edge. Slide the corner profile, internal (Art. VISION0062) and the finished edge, straight (Art. VISION0065) or the finished edge, inclined (Art. VISION0059) onto the MULTISTAR® VISION PLUS panel, and attach it to the prepared wall.

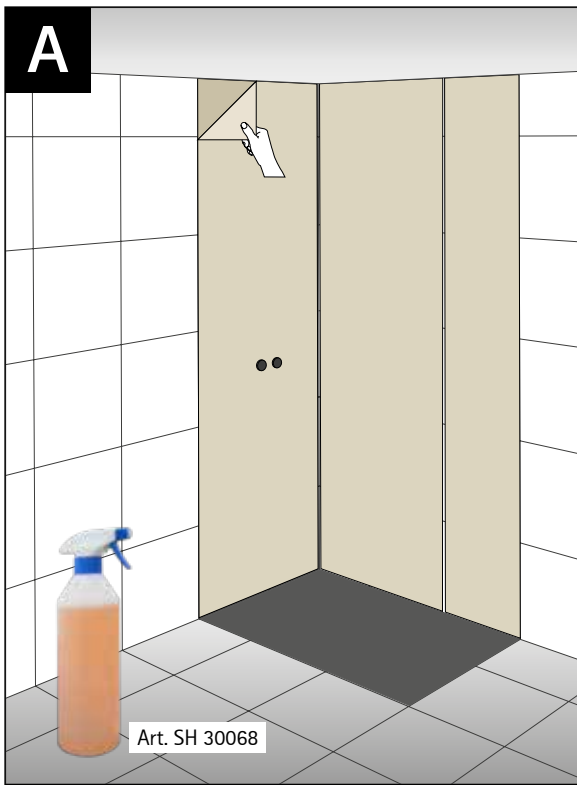


Attach the additional panels to the wall after preparing it with beads of adhesive, paying attention to the corresponding expansion joints. Remove the protective film before cleaning the panels with our surface cleaner for glass laminate (Art. SH 30068).

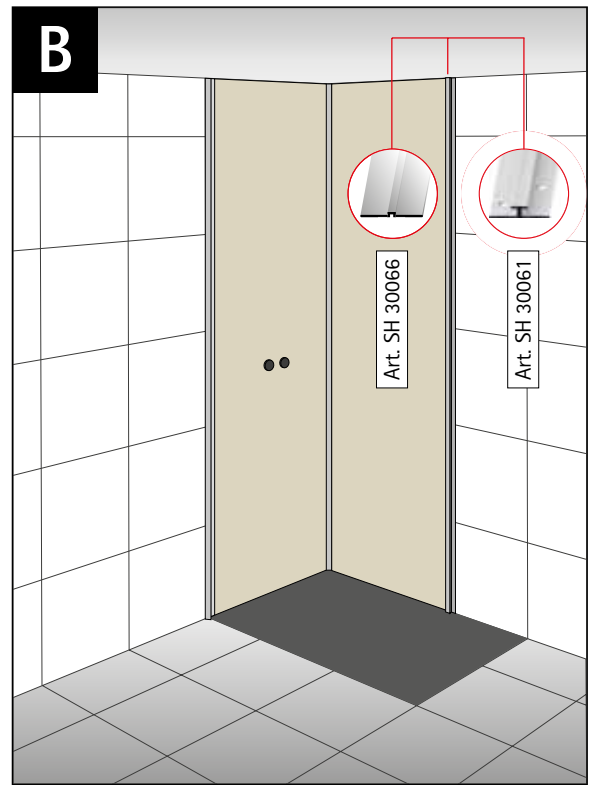

Apply silicone on the separation profile, slide the separation profile (Art. VISION0061 or VISION0066) onto the next MULTISTAR® VISION PLUS panel, and attach it to the wall which you prepared with beads of adhesive. Press the panel on evenly.

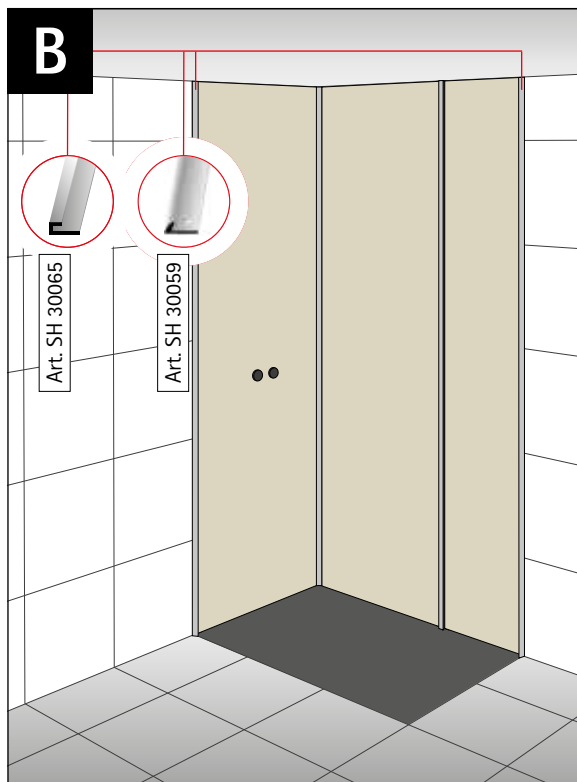


Slide the finished edge, inclined (Art. VISION0059) or the finished edge, straight (Art. VISION0065) onto the last panel, and attach them to the wall which you prepared with beads of adhesive. Press the panel on evenly.


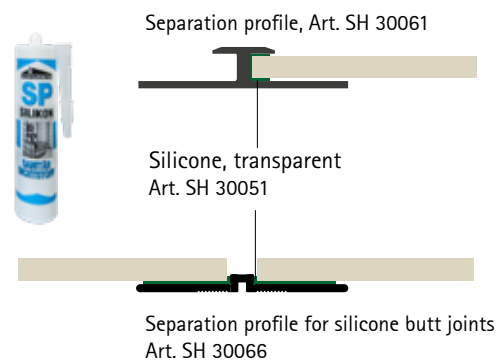




Remove the protective film before cleaning the panels using a microfibre cloth and the surface cleaner (Art. SH 30068).

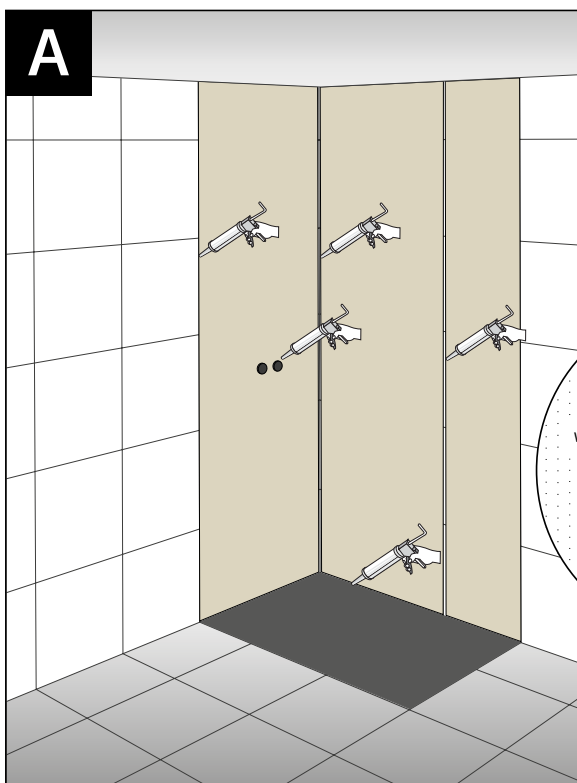


Use silicone to seal the transitions between wall and floor. Seal the gaps around the connections using silicone. To seal the outer and abutting edges, we recommend that you also use silicone across all exposed edges to prevent any ingress of moisture, dirt, accumulated water and mould.

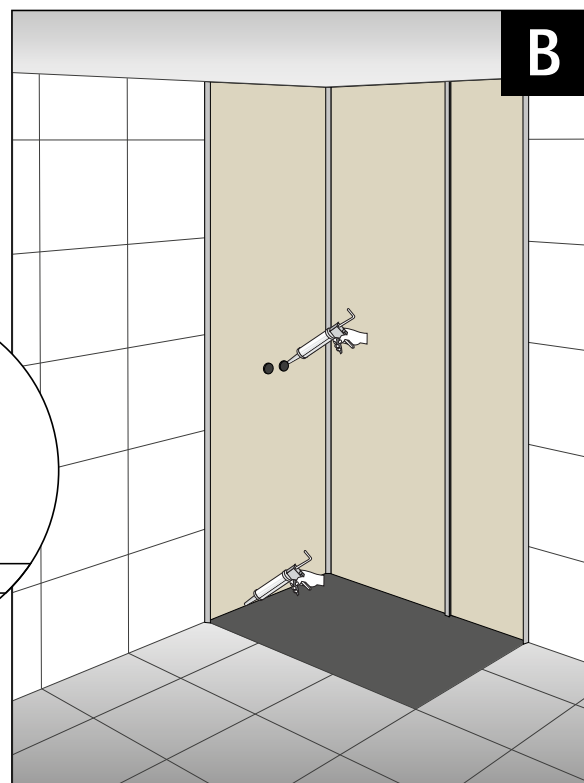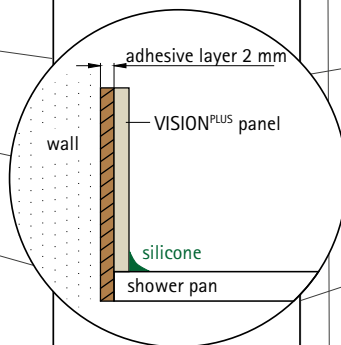

Use silicone to seal the transitions between wall and floor. Seal the gaps around the connections using silicone.

## 2. Installation on plasterboard or plaster


### **A** Installation not using profiles

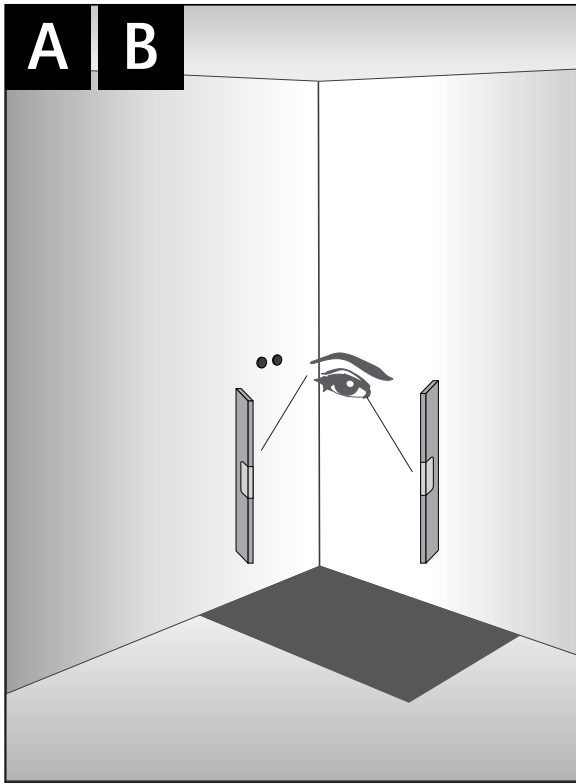

Before installing the MULTISTAR® VISION<sup>PLUS</sup> panels, check the following structural requirements: the walls must be level, and the substrate must be solid, dry, and of sufficient load-bearing capacity. **Attention:** to level the wall surfaces, use only levelling compound that does not contain any plasticisers.

See "Installation on tiles", items A and B for the remaining installation steps and for measuring

### **B** Installation using profiles

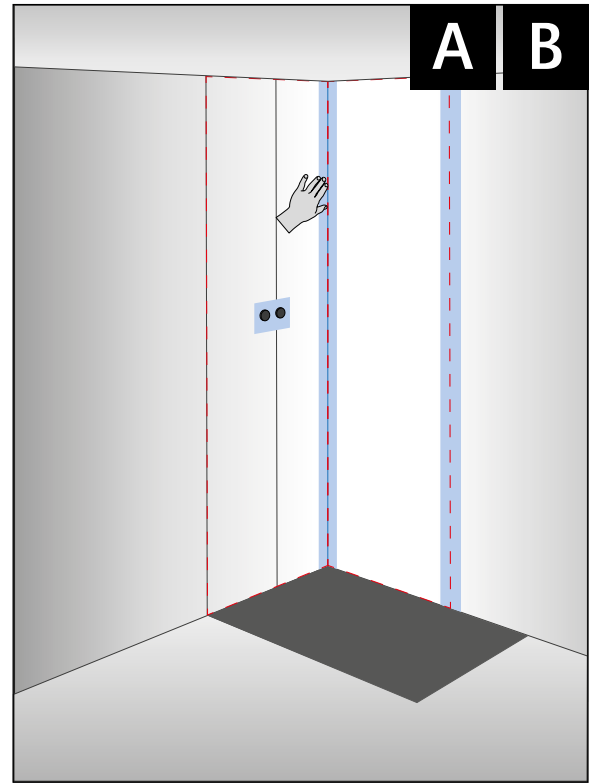

Apply self-adhesive sealing tape at the transition points (Art. SH 30069).

For Technical Information about VISION<sup>PLUS</sup>, scan here



or download the information from our website at  
<http://www.schedel-badinnovation.de/index.php/technische-informationen.html>