

# The right support for every tub.

SCHEDEL MULTISTAR®

tub and shower tray supports are made from high-quality EPS.



Decide in favour of this alternative: fast, clean, and technically inspired.
Over 2600 different models are available.










SCHEDEL MULTISTAR® tub supports guarantee the reliable coordination of appointments, saving time and money, thanks to their efficiency in installation.





## The advantages are obvious.

- No need for labour-intensive, dirty masonry work
- Rapid and reliable installation
- Heat insulation
- Noise protection
- Excellent fit (like a made-to-measure suit for your tub or shower tray)
- CFC-free




MULTISTAR® tub supports work behind the scenes.














Room-height wall module, depth 250 for free-standing installation Art. no. VISION0015

Oval tub support 1770 x 770 x 600 mm



Corners for oval tubs

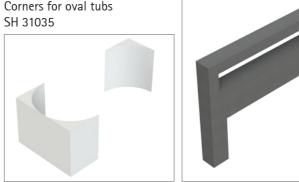


Half-height tub add-on module with one recess



Tub support 1580 x 990 x 570 mm



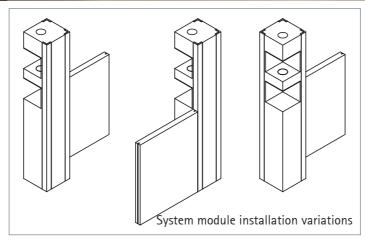

System module with half-height wall element Art. no. VISION0021




SEAT SALO 400 Total length 2750 mm



Shower tray support 1670 x 970 x 140 mm



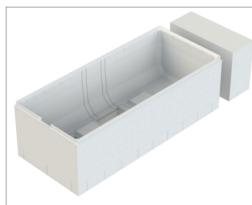

Tub support 1770 x 770 x 570 mm With shelf module 770 x 320 mm to match the tub support



Shower tray support 770 x 970 x 140 mm




Half-height wall module incl. supplementary element Art. no. VISION0012



WC top module Art. no. VISION0026











Wall module Width 1200 mm with two recesses and installation shaft Art. VISION0020

Oval tub support 1770 x 765 x 570 mm



Oval all-round shelf for oval tubs Storage width approx. 80 mm




Fittings support with installation shaft Art. no. VISION0010









SEAT Salo simply flex

System wall

Depth 80 mm

Art. no. SH 32960



400 mm deep

Shower tray support 1170 x 870 x 140 mm



Tub corner module Art. no. VISION0040



Tub support 1870 x 870 x 570 mm For hexagonal tub 1900 x 900 mm



Tub add-on module Seat height 870 mm wide 400 mm deep Art. no. VISION0008

15



Half-height wall module including supplementary element for installation of the glass partition Width 1000 mm Art. no. VISION0012




Shower tray support



Half-height tub add-on module 1770 mm wide Integrated recesses prepared for the installation of an LED spotlight, including cable duct

For free-standing installations, SCHEDEL offers a sealing element to close off the recesses. Matching tub support 1770 x 770 x 570 mm to the central waste tray Art. nos. VISION0052 and VISION0042

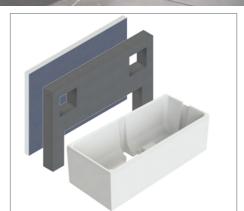

Add-on module Seat-height tub 870 mm wide

Extension set for add-on module can be shortened during Art. no. VISION0008 installation Art. no. VISION0050









# MULTISTAR® tub support


## Installation

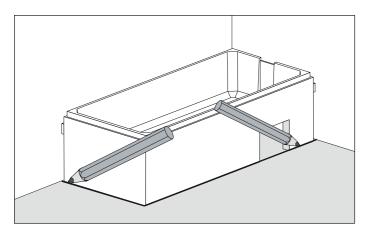


Position the tub support with the wall spacer mounted on the floor. Mark out the resting surfaces of the tub support. The installation surface must be clean, free from grease, and level. Level out any uneven areas using liquid screed or suitable material. Make the cut-out for the inspection opening.

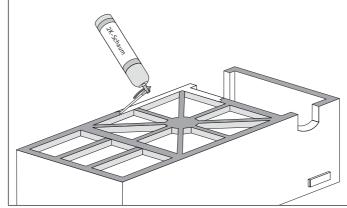


Cut out the pipe channels / pipe guides needed. Apply SCHEDEL MULTISTAR® 2K installation foam to the ribs on the tub support.

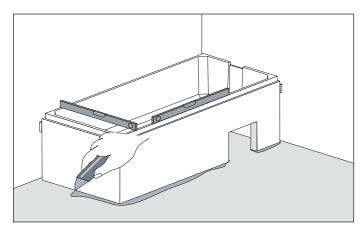


Position the tub support, aligning it horizontally. After around 30 minutes, remove any 2K installation foam that has leaked out.

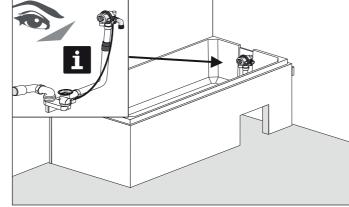

Install the SCHEDEL MULTISTAR® outflow fittings. Insert the tub. If the tub gives under strain at the edges and/or floor area, support it with 2K installation foam. Connect the outflow fittings to the tub. Ensure an even overhang and distance from the wall. Check for leaks.

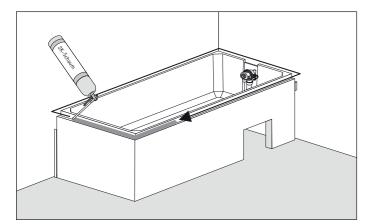


Before inserting the tub, apply installation foam all the way around on the edge of the tub support.

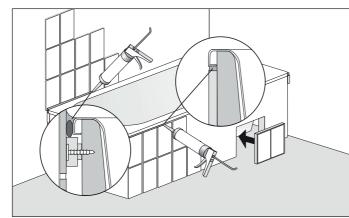

Close the inspection opening.
Use suitable sealant to seal all joints and gaps.

On site, please follow the detailed installation instruction supplied.

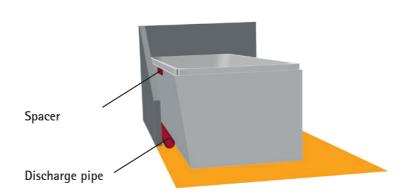

On SCHEDEL MULTISTAR® tub supports with one or two angled sides, discharge pipes can be laid effortlessly behind the tub support.



www.schedel-badinnovation.de



Many tub supports can be supplied with washing machine connections as required.

Installation accessories



MULTISTAR® 2K installation foam\* 400 ml cartridge 12 cartridges in each box



- Levels out uneven areas on the floor perfectly.
- Allows rapid alignment of the tub support.
- Guarantee of maximum stability




MULTISTAR® installation kit for the permanent sealing and sound-insulated connection of the tub to the wall as per the applicable DIN regulations

#### consisting of:

- Tub sealing tape3 m for tub supports2.20 m for shower tray supports
- 2 butyl filling corners
- Sound insulating tape
- Safety profile
- Tub edge protection strips
- Round cord
- 2 cleaning cloths



MULTISTAR® plumbing kits for all popular tub models

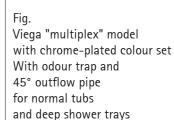

Other models can be found in our price list.



MULTISTAR® Installation adhesive\* 310 ml cartridge


21


20

<sup>\*</sup> Please note the use-by date (separate note on the packaging).

The right sound insulation system for every project - sound protection for tub supports

### Minimum requirements

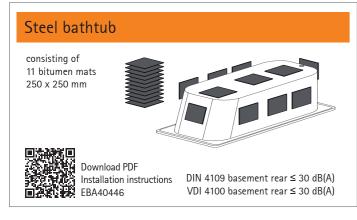


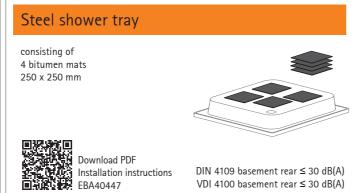




## More demanding requirements



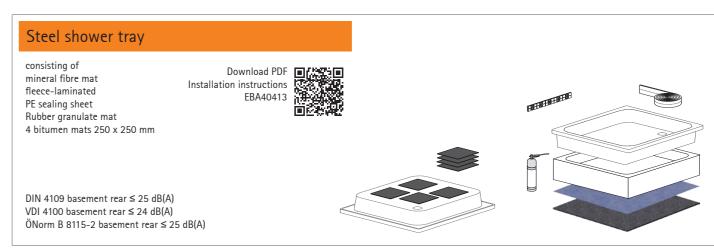

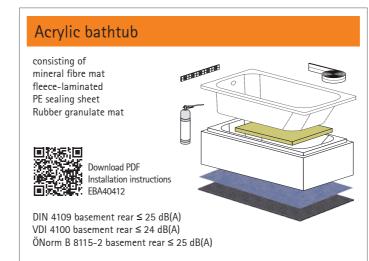



22 23



## SCHEDEL Bad+Design GmbH Oelsnitzer Strasse 55 08223 Falkenstein, Germany

Tel.: +49 (0)3745 745 0 Fax: +49 (0)3745 745 217 info@schedel-gmbh.de www.schedel-badinnovation.de

Advice near you: